



Vibration Monitoring Unit Series HE100

MADE IN
GERMANY



IECEE



IECEX



Proc. Cont. Eq.
for Ord. Loc.
Proc. Cont. Eq.
for Haz. Loc.

UK
CA



- Vibration speed (mm/s, rms)
- ATEX / IECEX / UKEx / EACEX Zone 1 / 2 / 21 / 22
- Analogue current output: 4–20 mA
- Frequency range: 10 Hz – 1000 Hz
1 Hz – 1000 Hz



Date of manufacture: _____

Type description: _____

Serial no.: _____

Operating instructions

Vibration Monitoring Unit Type HE100

Standard and ATEX / IECEX / UKEx / EACEx

Version: 2024-05-31

Attention!

Prior to commissioning the product, the instruction manual must be read and understood.

All rights reserved, including rights to translation.
Subject to modifications.

Please contact the company with any questions:

HAUBER-Elektronik GmbH
Fabrikstraße 6
D-72622 Nürtingen
Germany
Tel.: +49 (0) 7022 / 21750-0
Fax: +49 (0) 7022 / 21750-50
info@hauber-elektronik.de
www.hauber-elektronik.de

1 Contents

1	Contents	3
2	Safety information	4
3	Scope of this instruction manual	4
4	Vibration Monitoring Unit Type HE100	5
5	Intended Use	5
6	Scope of supply	5
7	Documents and Certificates	5
8	Transfer of liability when operating in potentially explosive atmospheres	6
9	Fields of application and example labels	7
10	Conditions for safe operation in potentially explosive atmospheres	8
10.1	HE100.01 (ignition protection class "pressure-resistant casing")	8
10.2	HE100.02 (ignition protection class "intrinsically safe")	8
10.3	HE100.03 cULus Hazloc DIV2	9
11	Technical data	11
11.1	General data	11
11.2	Electrical data	11
11.3	Operating range of the vibration monitoring unit	12
11.4	Typical frequency response	13
11.5	Mechanical data	14
11.6	Housing dimensions	14
11.7	Properties of the integrated cable	15
12	Connection	16
13	Assembly and disassembly	17
13.1	General notes	17
13.2	Fixing the vibration monitoring unit to the mounting surface	17
14	Installation and commissioning	18
14.1	General notes	18
14.2	Wiring diagram	18
15	Maintenance and repair	21
15.1	General notes	21
15.2	Troubleshooting Table	21
16	Transport, storage and disposal	22
17	Accessories	22
18	Coding Type HE100	23
19	EU and UK Declaration of Conformity	24

2 Safety information

2.1 General

The safety instructions are intended to protect people and property from damage and hazards that could arise as the result of improper use, incorrect operation or other misuse or devices, especially in explosive areas. Therefore, please read the operating instructions carefully before working on the product or operating it. The operating instructions must be accessible to operating personnel at all times.

Please make sure that all documents are present and complete before commissioning or performing other work on the product. If the documents have not all been delivered in full or if further copies are necessary, they can also be obtained in other languages.

The product is built according to the latest state of the art. However, hazards to people, machinery and systems can still arise as the result of improper handling, unintended use or operation and maintenance by persons inadequately trained on the product.

All those who are involved in the installation, operation and maintenance of the product in the operator's plant must read and understand the operating instructions.

The product may only be assembled, disassembled, installed and repaired by instructed, sufficiently trained and authorised personnel.

2.2 Symbols used



This symbol indicates an explosion hazard.



This symbol indicates a hazard from electrical current.



This symbol indicates information unrelated to safety.

3 Scope of this instruction manual

This instruction manual for the HE100-type vibration monitoring unit applies to the following variants:

Standard / ATEX / IECEx / UKEx / EACEx

The variants are functionally identical. The ATEX / IECEx / UKEx / EACEx variants also possess certifications and labels which permit use in potentially explosive atmospheres. For further information, see chapter "Fields of application" on page 7.

4 Vibration Monitoring Unit Type HE100

The HE100-type vibration monitoring unit is used to measure and monitor absolute bearing vibrations in machines in line with DIN ISO 10816.

It offers the following features:

- Operating principle: The two-wire system.
- Measurement parameter: The effective value (rms) of the vibration speed in mm/s, in accordance with DIN ISO 2954.
- Analogue current output: Interference-free DC signal from 4-20 mA, proportional to the measuring range of the monitoring unit.
- A break on the monitoring cable can be detected by the subsequent evaluation device: DC signal value < 3.5 mA.

5 Intended Use

The HE100 type is used exclusively for measuring mechanical vibrations in machines and mechanical systems. It may only be used in accordance with the specifications listed in the data sheet. **Main fields of application:** Fans, ventilators, blowers, electric motors, pumps, centrifuges, separators, generators, turbines and similar oscillating mechanical equipment.

6 Scope of supply

All versions include:

- Vibration monitoring
- Operating instructions

7 Documents and Certificates

You can find the following documents and certificates for HE100 type at www.hauber-el-ektronik.de where they can be viewed and downloaded:

- EU type examination certificate ATEX, no.: PTZ 16 ATEX 0029 X Iss 4
- UKEx certificate number: UL22UKEX2481X
- IECEX certificate of conformity, no.: PTZ 18.0009 X Iss 2
- UL certificate of conformity, no.: E507077-20191126
- UL Haz Loc Certificate of Conformity & Control Drawing M003-HE100
- CCC certificate for mandatory product certification for China
- KCs Ex certificate
- EACEx certificate RU C-DE.HA65.B.00053/19
- EAC Declaration

8 Transfer of liability when operating in potentially explosive atmospheres





























The owner of the system is exclusively liable for the appropriate configuration of the electrical connections with respect to explosion protection regulations and correct commissioning.

If the system is installed by a sub-contractor on behalf of the owner, the system may only be commissioned after the sub-contractor has issued written confirmation in the form of a certificate of installation that the system has been installed correctly and professionally in accordance with the applicable legal regulations.

The operator is obliged to notify the responsible authorities of the initial commissioning of explosion-protected systems or system components and their re-commissioning following extensive changes or maintenance.

9

Fields of application and example labels

	HE100.00	HE100.01	HE100.02	HE100.03
Version	Standard CE / IEC / EAC UL Proc. Cont. Eq. Ord. Loc.	ATEX / IECEx / UKEx / EACEx Pressure-resistant casing Ex db Protection through housing Ex tb	ATEX / IECEx / UKEx / EACEx Intrinsic safety Ex ib	UL Proc. Cont. Eq. Haz. Loc. Division 2
Fields of appli- cation	Atmospheres not at risk of ex- plosion	Potentially explosive atmos- pheres of zones 1 and 21 2 and 22	Potentially explosive atmos- pheres of zones 1 and 21 2 and 22	Potentially explosive atmos- pheres according to UL Divi- sion 2
Marking	 E507077 Process Control Equipment for Ordinary Location	 II 2G Ex db IIC T4 Gb II 2D Ex tb IIIC T120 °C Db -40 °C ≤ T _{Amb} ≤ +60 °C PTZ 16 ATEX 0029 X Rev 3 IECEx Ex db IIC T4 Gb Ex tb IIIC T120 °C Db -40 °C ≤ T _{Amb} ≤ +60 °C IECEx PTZ 18.0009 X Rev 2 UKCA II 2G Ex db IIC T4 Gb II 2D Ex tb IIIC T120 °C Db -40 °C ≤ T _{Amb} ≤ +60 °C UL22UKEX2481X EAC 1Ex db IIC T4 X Ex tb IIIC T120 °C X -40 °C ≤ T _{Amb} ≤ +60 °C No TP TC 012/2011	 II 2G Ex ib IIC T4 Gb II 2D Ex ib IIIC T125 °C Db -40 °C ≤ T _{Amb} ≤ +60 °C PTZ 16 ATEX 0029 X Rev 3 IECEx Ex ib IIC T4 Gb Ex ib IIIC T125 °C Db -40 °C ≤ T _{Amb} ≤ +60 °C IECEx PTZ 18.0009 X Rev 2 UKCA II 2G Ex ib IIC T4 Gb II 2D Ex ib IIIC T125 °C Db -40 °C ≤ T _{Amb} ≤ +60 °C UL22UKEX2481X EAC 1Ex ib IIC T4 X Ex ib IIIC T125 °C X -40 °C ≤ T _{Amb} ≤ +60 °C No TP TC 012/2011	 Class I, Division 2, Groups A, B, C and D, T4 Class II, Division 2, Groups F and G, T4 E516625 Process Control Equipment for Hazardous Location
Type plate	 Type: HE100.00.16.00.00.00.000 Item-no.: 12345 Serial-no.: 123456 / 2023 Measuring range v _{cc} : 0...16 mm/s Frequency range v _{cc} : 10...1000 Hz -40 °C ≤ T _{amb} ≤ +60 °C Manufacturer: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen GERMANY www.hauber-elektronik.de     тип: HE100.00.16.00.00.00.000 Серийный №: 123456 / 2023 Диапазоны измерений v _{cc} : 0...16 мм/с Диапазон частот v _{cc} : 10...1000 Гц -40 °C ≤ T _{amb} ≤ +60 °C производитель: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen Германия www.hauber-elektronik.de 	 Type: HE100.01.16.00.00.00.050 Item-no.: 12345 Serial-no.: 123456 / 2023 Measuring range v _{cc} : 0...16 mm/s Frequency range v _{cc} : 10...1000 Hz -40 °C ≤ T _{amb} ≤ +60 °C Manufacturer: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen GERMANY www.hauber-elektronik.de     тип: HE100.01.16.00.00.00.050 Серийный №: 123456 / 2023 Диапазоны измерений v _{cc} : 0...16 мм/с Диапазон частот v _{cc} : 10...1000 Гц -40 °C ≤ T _{amb} ≤ +60 °C производитель: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen Германия www.hauber-elektronik.de 	 Type: HE100.02.16.00.00.00.000 Item-no.: 12345 Serial-no.: 123456 / 2023 Measuring range v _{cc} : 0...16 mm/s Frequency range v _{cc} : 10...1000 Hz -40 °C ≤ T _{amb} ≤ +60 °C Manufacturer: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen GERMANY www.hauber-elektronik.de     тип: HE100.02.16.00.00.00.000 Серийный №: 123456 / 2023 Диапазоны измерений v _{cc} : 0...16 мм/с Диапазон частот v _{cc} : 10...1000 Гц -40 °C ≤ T _{amb} ≤ +60 °C производитель: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen Германия www.hauber-elektronik.de 	 Type: HE100.03.16.00.00.00.050 Item-no.: 12345 Serial-no.: 123456 / 2023 Measuring range v _{cc} : 0...16 mm/s Frequency range v _{cc} : 10...1000 Hz -40 °C ≤ T _{amb} ≤ +60 °C Manufacturer: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen GERMANY www.hauber-elektronik.de     тип: HE100.03.16.00.00.00.050 Серийный №: 123456 / 2023 Диапазоны измерений v _{cc} : 0...16 мм/с Диапазон частот v _{cc} : 10...1000 Гц -40 °C ≤ T _{amb} ≤ +60 °C производитель: HAUBER-Elektronik GmbH Fabrikstraße 6 · 72622 Nürtingen Германия www.hauber-elektronik.de 

Standards applied

You can find a list of standards, including the related issue dates, in the EU type examination certificate for the vibration monitoring unit.

10 Conditions for safe operation in potentially explosive atmospheres

The following conditions must be met for safe operation in a potentially explosive atmosphere.

10.1 HE100.01 (ignition protection class "pressure-resistant casing")

Electrical data

		min.	typ.	max.
Supply voltage	U_n	10 V DC	24 V DC	30 V DC
Current consumption	I_n	4 mA	4 – 20 mA	25 mA

Tab. 1: Electrical data HE100.01

10.2 HE100.02 (ignition protection class "intrinsically safe")



With the ignition protection class intrinsically safe Ex ib IIC or IIC, the sensor must only be operated in a certified intrinsically safe electrical circuit. The maximum values must not be exceeded.



The following values relate to the vibration monitoring unit and the supply and signal circuit.

Electrical data

Max. input voltage of the vibration monitoring unit	U_i	30 V DC
Max. input current of the vibration monitoring unit	I_i	100 mA
Max. input power of the vibration monitoring unit	P_i	800 mW
Capacitance of the vibration monitoring unit	C_i	44 nF
Inductance of the vibration monitoring unit	L_i	0 μ H

Tab. 2: HE100.02 electrical data

Other conditions

1. Extended ambient temperature range of -40 °C to +60 °C
2. Equipotential bonding takes place during installation.
3. The instruction manual must be heeded.
4. The following feed/inlet isolating amplifiers are tested and approved by Hauber-Elektronik GmbH for intrinsically safe operation:
 - Endress und Hauser
active barrier RN221N with HART® diagnosis
 - PHOENIX CONTACT Deutschland GmbH
feed and isolating amplifier MACX MCR-EX-SL-RPSSII 2865340
 - Pepperl+Fuchs
SMART transmitter supply unit KFD2-STC3-Ex1
 - R. STAHL Schaltgeräte GmbH
transducer supply unit 9260/13-11-10s art. no. 261384
5. The Ex i version must only be operated with the Ex i cable approved by Hauber-Elektronik. On this cable, pin 5 of the M12 connector is assigned to the cable shield. (HE article number: 11141 (2 m), 11142 (5 m), 11143 (10 m), additional lengths available in stock)



HAUBER-Elektronik is not responsible for changes to the specification of the feed/inlet isolating amplifier mentioned.

10.3

HE100.03 cULus Hazloc DIV2



The version for DIV2 may not be operated without the safety clip to guard against accidental disconnection of the plug connection! If operated in a potentially explosive atmosphere, there is otherwise an explosion hazard, due to spark formation!



For use in DIV2, the supply voltage may not exceed 28.1 V DC. This must be ensured through the use of an appropriate power supply unit.

Attaching the safety clip

1. Insert the connecting cable socket into the M12 connector as far as it will go (mind the position of the code cam).
2. Tighten the knurled rotating ring of the socket by hand.
3. Attach the safety clip to guard against accidental disconnection of the plug connection.
 - Place both shell halves of the clip around the plug connection.
 - Press both shell halves firmly together with your hands until the lock snaps into place.
 - Place the arrow connected to the two shell halves around the cable and pull it through the eyelet at the other end so that the notice "DO NOT DISCONNECT UNDER VOLTAGE" can be read alongside the cable.

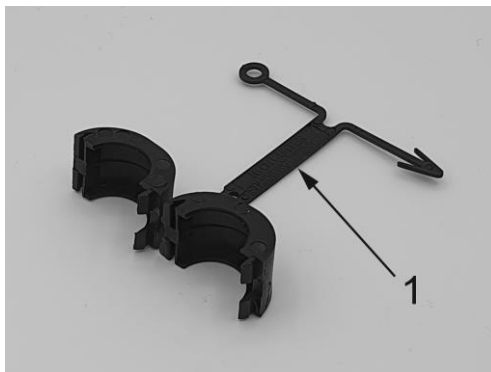


Fig. 1: Safety clip

1 Notice tag



Fig. 2: Attached safety clip

Attaching the protection cap

After disconnecting the plug, the protection cap must be attached to the M12 plug!
Detach the safety clip and attach the protection cap.

1. Disconnect voltage.
2. Pry apart both shell halves of the sleeve with a screwdriver.
3. Close off the M12 plug well with the protection cap.



Fig. 3: Protection cap



Fig. 4: Attached protection cap

Control drawing

Please also note the control drawing HE100-M003.

Electrical data

Max. input voltage of the vibration monitoring unit	V _{i-max}	28.1 V DC
Max. input current of the vibration monitoring unit	I _{i-max}	25 mA / 50 mA (only HE101)

Tab. 3: Electrical data HE100.03

11 Technical data

11.1 General data



Each sensor has one of the listed measuring and frequency ranges. Further ranges on request.

Please indicate the measuring and frequency range in your request.

Measuring range:	0 – 8 mm/s (for frequency range > 10 Hz only) 0 – 16 mm/s 0 – 32 mm/s 0 – 64 mm/s Other measuring ranges See also Coding Type HE100, page 23.
Measuring accuracy:	±10 % (according to DIN ISO 2954)
Transverse sensitivity:	< 5%
Frequency range:	10 Hz–1,000 Hz (standard) 1 Hz–1000 Hz
Calibration point	159.2 Hz and 90% amplitude of measuring range
Maximum acceleration	±16.5 g
Lifetime	10 years
MTTF value	399 years
Permissible temperature ranges	-40 °C – +60 °C (ambient temperature) -40 °C – +125 °C (measuring head temperature)

Tab. 4: General data

11.2 Electrical data

Output signal:	4 – 20 mA (proportional to the measuring range)
Power supply:	10 – 30 V DC
Power input (max.):	25 mA
Load/output load (max.):	500 Ω
Fuse *	30VDC, 3A, medium blow
* Ensure that the supply line is protected by a UL-approved fuse for UL-compliant sensor operation.	

Tab. 5: Electrical data

11.3 Operating range of the vibration monitoring unit

The operating range is independent from the measuring range. It can be derived from the maximum acceleration, which is 16.5 g across all frequencies. The maximum measurable vibration velocity is based on the formula

$$v_{max} = \int a_{max}$$

For sinusoidal vibration, $v_{max} = \frac{a_{max}}{2\pi f}$ applies

Fig. 5: shows the operating range of the vibration monitoring unit, which is limited by the maximum measurable vibration velocity in mm/s depending on the frequency in Hz.

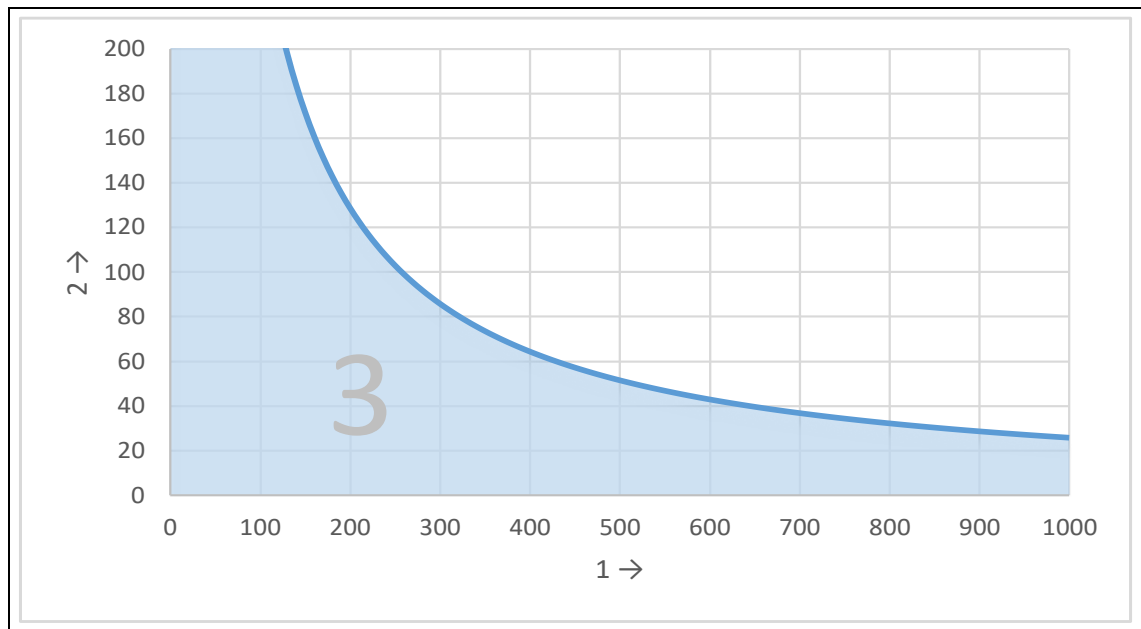


Fig. 5: Operating range diagram

- 1 Frequency in Hz
- 2 Vibration velocity in mm/s
- 3 Operating range of the vibration monitoring unit

Reading example:

Frequency (Hz)	Maximum measurable vibration speed (mm/s)
250	103
400	64
1000	25

Tab. 6: Reading example of operating range

11.4 Typical frequency response

10 Hz–1,000 Hz (standard)

The frequency response is recorded using a reference sensor.

- 4 Hz. . . 1200 Hz acceleration sensor

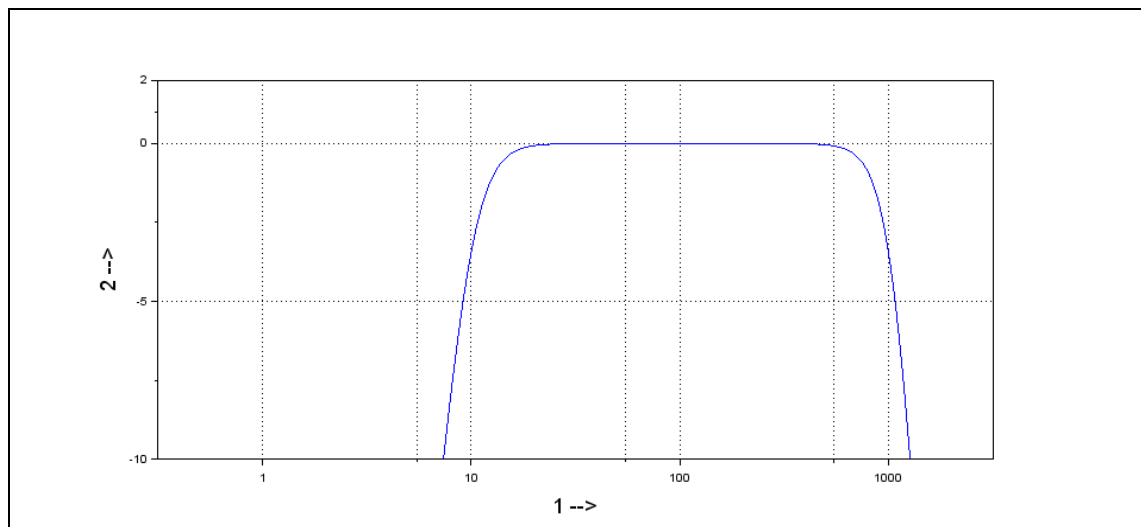


Fig. 6: Typical frequency response 10 Hz–1000 Hz

- 1 Frequency in Hz
- 2 Amplification in dB

1 Hz–1000 Hz

The frequency response is recorded using two reference sensors.

- 1 Hz. . . 10 Hz laser sensor
- 10 Hz. . . 1200 Hz acceleration sensor

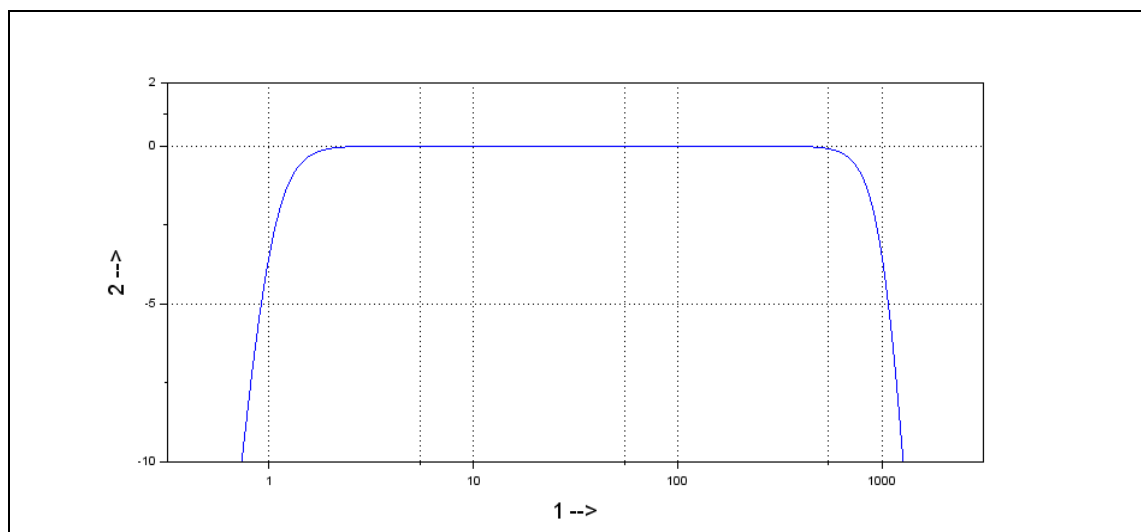


Fig. 7: Typical frequency response 1 Hz–1000 Hz

- 1 Frequency in Hz
- 2 Amplification in dB

11.5 Mechanical data



Additional materials and fixings can be found in section "Coding Type HE100" on page 23.

Housing material:	Stainless steel V2A, material no.: 1.4305 (standard)
Fastening:	Width across flats 24 (hexagonal) M8 x 8 mm Pitch: 1.25 mm (standard)
Installation type:	standing/vertical or lying/horizontal
Measuring direction:	Along the fastening axis
Tightening torque sensor	8 Nm
Max. torque of the M12 union nut on the connector	0.4 Nm
Weight:	approx. 200 g
Protection class:	IP 66/67 (when connected)

Tab. 7: Mechanical data

11.6 Housing dimensions

11.6.1 Version: Standard and ATEX / IECEx / UKEx / EACEx intrinsic safety Ex i

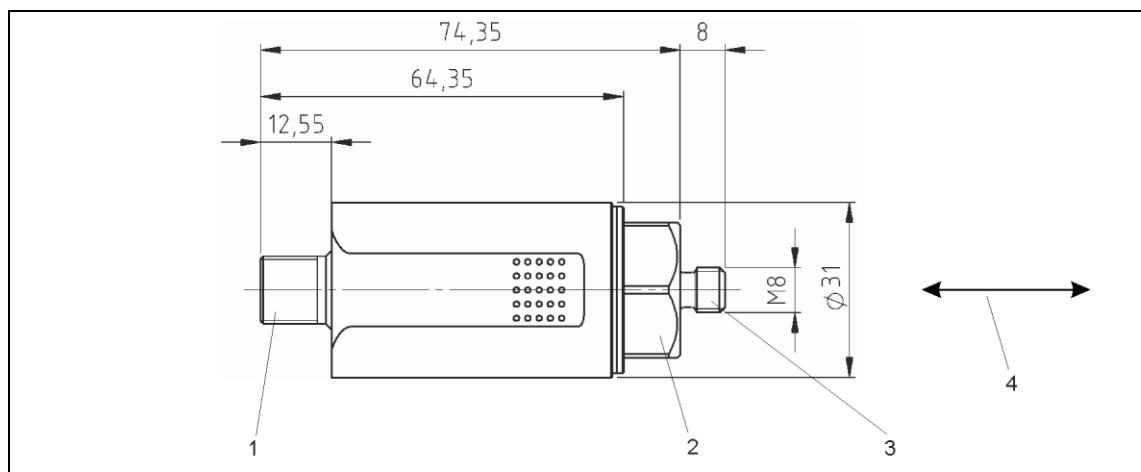


Fig. 8: Housing with M12 connector

All measurements in mm

- 1 M12 connector
- 2 Width A/F 24
- 3 Fixing
- 4 Measuring direction along the fixing axis

11.6.2 **Version: ATEX / IECEx / UKEx / EACEx Ex d**

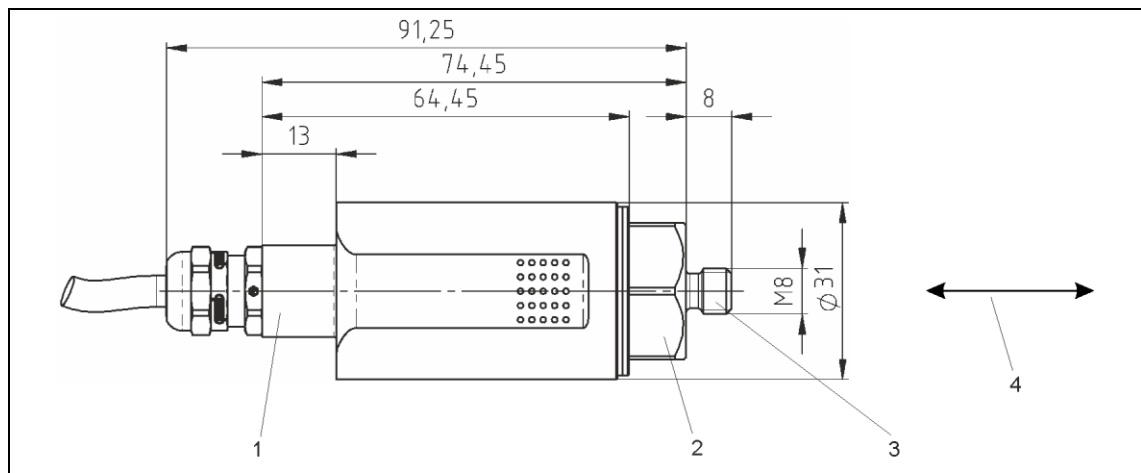


Fig. 9: Housing with integrated cable

All measurements in mm

- | | |
|---|---|
| 1 | Cable gland for integrated cable |
| 2 | Width A/F 24 |
| 3 | Fixing |
| 4 | Measuring direction along the fixing axis |




11.7 Properties of the integrated cable

Cable type	12YC11Y 4x0.3.4 mm ²
Conductor material	El-Cu stranded wire
Conductor insulation	TPEE E (12Y)
Coating	PUR
Coating diameter	6.0 ± 0.2 mm
Temperature range	-40 °C – +80 °C fixed -30 °C – +80 °C moving
Minimum bending radius	30 mm fixed 60 mm moving
Flame resistant	Yes, according to UL 1582 Sec. 1061
Halogen-free	Yes

Tab. 8: Technical data of the integrated cable

12

Connection

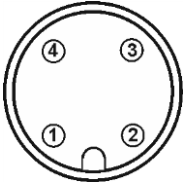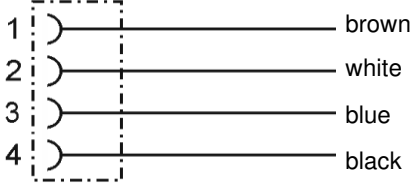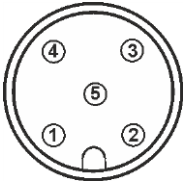Version:	Standard
<p>Connector, M12, 4-pin</p> 	
	<p>Pin 1: 10 – 30 V DC</p> <p>Pin 2: NC</p> <p>Pin 3: 4–20 mA</p> <p>Pin 4: NC</p> <p>NC: Not connected</p>
Version:	ATEX / IECEx / UKEx / EACEx pressure-resistant casing Ex d ATEX / IECEx / UKEx / EACEx protection through housing Ex tb
<p>Integrated cable</p>  <p>PUR sheathed cable, Ø: approx. 6.5 mm, 4-pin, 0.34 mm²</p>	
	<p>Pin 1: 10 – 30 V DC</p> <p>Pin 2: NC</p> <p>Pin 3: 4–20 mA</p> <p>Pin 4: NC</p> <p>NC: Not connected</p>
Version:	ATEX / IECEx / UKEx / EACEx intrinsic safety Ex i
<p>Connector, M12, 5-pin</p> 	
	<p>Pin 1: 10 – 30 V DC</p> <p>Pin 2: NC</p> <p>Pin 3: 4–20 mA</p> <p>Pin 4: NC</p> <p>Pin 5: Sensor housing</p> <p>NC: Not connected</p>



The system operates according to the two-wire principle, i.e. the entire function (voltage supply and current signal) is achieved using 2 wires (Pin 1 and Pin 3).

To avoid capacitive interference, pins 2 and 4 must remain **open/unoccupied**.

13 Assembly and disassembly

13.1 General notes

Assembly and disassembly work on and with the vibration monitoring unit may only be performed by an authorised specialist familiar with the safety regulations governing handling electrical components!



The housing of the vibration monitoring unit must be earthed via the fixing – through the machine earth of the mounting surface or through a separate protective conductor (PE)!

13.2 Fixing the vibration monitoring unit to the mounting surface

13.2.1 Prerequisites

- Mounting surface is clean and flat, i.e. free of paint, rust, etc.
- Measuring head area of the vibration monitoring unit must lie flat on the mounting surface.

13.2.2 Tool

- Hex key, width A/F 24

13.2.3 Work steps and instructions

- Screw vibration monitoring unit into the threaded hole of the mounting surface in a friction-locked manner using a hex key. The tightening torque should be 8 Nm.
- The tightening torque of the M12 union nut of the plug connection must not exceed 0.4 Nm.



To obtain precise measurement values, the vibration monitoring unit must be fixed to the mounting surface in a friction-locked manner!



Auxiliary structures for fixing are to be avoided! If unavoidable, make them as firm as possible!



Earth/ground loops are amongst the most common problems in measurement set-ups with sensitive sensor technology. These issues arise due to unintentional differences in potential in the electrical circuit between the sensor and evaluation unit. As a countermeasure, we recommend our standard earthing concept or, depending on the application, our Alternative earthing concept



Ensure that the earth connection is electrically secure.

14 Installation and commissioning

14.1 General notes

Installation and commissioning of the vibration monitoring unit must be performed by an authorised specialist who is familiar with the safety regulations when handling electrical components.



Protect the connection cable and any extension cable from electrical interference and mechanical damage! Local regulations and instructions must be observed in doing so!

14.2 Wiring diagram

Earth/ground loops are amongst the most common problems in measurement set-ups with sensitive sensor technology. These issues arise due to unintentional differences in potential in the electrical circuit between the sensor and evaluation unit.



Ensure that the earth connection is electrically secure.

14.2.1 Standard earthing concept

With the standard earthing concept, the sensor cable shield has no connection to the sensor housing. The sensor housing has the same potential as the machine earth.

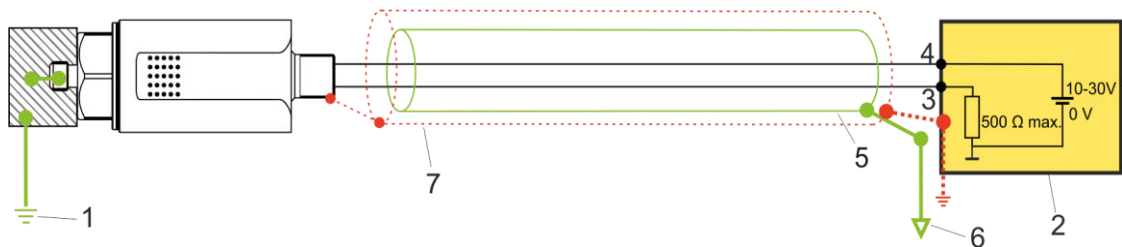


Fig. 10: Standard earthing concept

- 1 Machine earth
- 2 Evaluation unit (measuring instrument, SPS, ...)
- 3 Blue – 4 – 20 mA current signal
- 4 Brown – 10 – 30 V DC
- 5 Cable shield
- 6 Evaluation unit for earth potential
- 7 Optional flexible metal tubing (available for version with integrated cable only)

14.2.2 Alternative earthing concept

With the alternative earthing concept, the sensor cable shield has a connection to the sensor housing. The sensor housing uncoupled from the machine earth by means of an EMC adapter (red). With the alternative earthing concept an electrically secure earth connection is only ensured for versions with an M12 connector. For variants with an integrated cable, the alternative earthing concept cannot be used.

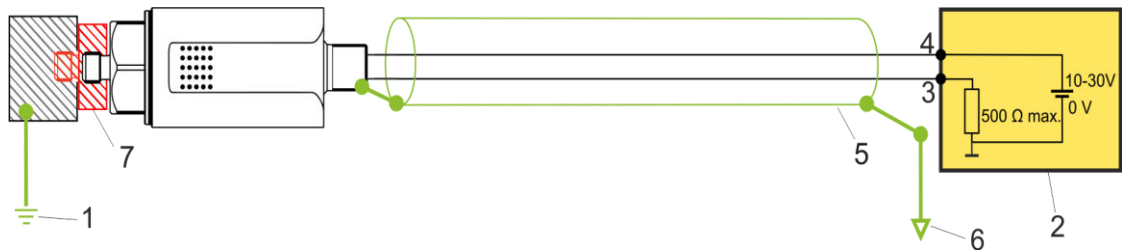


Fig. 11: Alternative earthing concept

- 1 Machine earth
- 2 Evaluation unit (measuring instrument, SPS, ...)
- 3 Blue – 4 – 20 mA current signal
- 4 Brown – 10 – 30 V DC
- 5 Cable shield
- 6 Evaluation unit for earth potential
- 7 EMC adapter (Hauber item no. 10473)



In your request, please notify us if you would like to use the alternative earthing concept. We will then provide you with the appropriate sensor cable and the EMC adapter.

14.2.3 Explosive atmosphere Ex i earthing concept

For the Ex i sensor, the shield is routed via Pin 5 of the plug connection to the potential of the sensor housing that typically provides the machine earth.

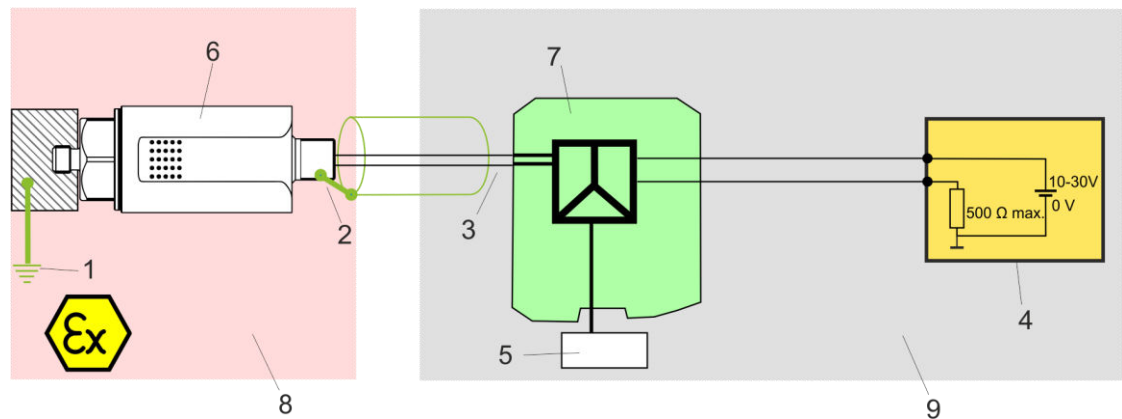


Fig. 12: Ex i earthing concept

1	Machine earth	5	Power supply
2	The shield of the Ex i cable is at the potential of the housing via Pin 5 of the M12 connector	6	Hauber Ex i sensor
3	Do not earth the shield	7	Isolating amplifier
4	Evaluation unit (measuring device, PLC, etc.)	8	Potentially explosive atmospheres of zones 1 and 21/2 and 22
		9	Area not at risk

15 Maintenance and repair

15.1 General notes



Repair and cleaning work on vibration monitoring units may only be performed by an authorised specialist familiar with the safety regulations governing handling electrical components.



Immediately replace defective connection cables!
A defective vibration monitoring unit must be completely replaced!



The vibration monitoring unit HE100 is maintenance-free!

15.2 Troubleshooting Table

Fault	Cause	Action
No measured value (4-20 mA)	No power supply	Check power source and/or supply
	Discontinuity in connecting cable	Replace connecting cable
	Fuse defective	Replace fuse
	Connection has incorrect polarity	Connection of correct pole
	Vibration monitoring unit faulty	Vibration Monitoring Unit replace
Incorrect Reading	Vibration monitoring unit not mounted in a friction-locked manner	Mount vibration monitoring unit in a friction-locked manner
	Vibration monitoring unit installed in wrong place	Install vibration monitoring unit in correct place
EMC problems		For further information, see chapter "Alternative earthing concept" on page 19.

Tab. 9: Troubleshooting Table

16 Transport, storage and disposal

The sensor must be protected from damaging environmental factors and mechanical damage during transport with the use of adequate packing.

The sensor may not be stored in ambient temperatures outside the permitted operating temperature.

The product contains electronic components and must be disposed of properly in accordance with local laws and regulations.

17 Accessories

Accessories	Standard (HE100.00...)	Ex d, tb (HE100.01...)	Ex i (HE100.02...)	UL Div 2 (HE100.03...)
Factory calibration certificate – art. no.: 10419	x	x	x	x
Evaluation device types 652 and 656	x	x	x	
HE400-type portable measuring instrument	x			
ATEX / IECEx / UKEx / EACEx supply isolation amplifier for intrinsic safety Ex i – art. no.: 10993			x	
Magnetic foot – art. no.: 10054	x			x
Various mounting adapters; e.g. M8 -> M10	x	x	x	x
Configurable mating plug	x	x		x
Connection cable, socket M12, 4-pin, 0.34 mm ² , L= 2 m, 5 m, 10 m or customised	x			x
ATEX / IECEx / UKEx / EACEx connection cable for intrinsic safety Ex i, M12, 4-pin, 0.34 mm ² , L= 2 m, 5 m, 10 m or customised			x	
Rubber protective nozzle – art. no.: 10986	x	x	x	x
Flexible metal tubing	x	x	x	x
EMC adapter – art. no.: 10473	x			x



For use OUTDOORS or using SPRAY WATER, the vibration monitoring unit should have the rubber nozzle pulled over it for additional protection.



Rubber protective nozzle

18 Coding Type HE100

HE100.	00.	16.	01.	00.	00.	000
HE series 100 = transmitter 4 – 20 mA ~ mm/s rms						
ATEX / IECEx / UKEx / EACEx 00 = no ATEX / IECEx / UKEx / EACEx 01 = ATEX / IECEx / UKEx / EACEx Ex d and Ex tb (Zone 1 / 2 / 21 / 22) 02 = ATEX / IECEx / UKEx / EACEx Ex ib (Zone 1 / 2 / 21 / 22) 03 = UL Proc. Cont. Eq. Haz. Loc. Division 2						
Measuring range 8 = 8 mm/s rms (only available for frequency range ≥ 10 Hz) 10 = 10 mm/s rms 16 = 16 mm/s rms (standard) 20 = 20 mm/s rms 25 = 25 mm/s rms 32 = 32 mm/s rms 50 = 50 mm/s rms 64 = 64 mm/s rms 128 = 128 mm/s rms 256 = 256 mm/s rms 512 = 512 mm/s rms						
Frequency range 00 = 10 – 1000 Hz (standard) 01 = 1 – 1000 Hz						
Housing material 00 = 1.4305 (V2A) (standard) 01 = 1.4404 (V4A) 02 = 1.4462 duplex stainless steel						
Housing fixing thread (standard) 00 = M8 x 8 mm; pitch 1.25 mm 01 = SPM thread cone 02 = M8 x 8 mm inner thread						
Connection 000 = M12 connector (standard) 020 = 2 m integrated cable 050 = 5 m integrated cable 100 = 10 m integrated cable						



Don't see your desired configuration listed? Please contact us and we can offer you a solution for your specific needs.

19 EU and UK Declaration of Conformity

Declaration of conformity



HAUBER-Elektronik GmbH
Fabrikstraße 6
D-72622 Nürtingen-Zizishausen

declares under our sole responsibility that the products listed below that relate to this declaration meet the basic health and safety requirements of the norms and directives below.

Product series

HE100, HE101, HE102, HE103

Affixed CE and UKCA marking

 0539  0843

ATEX Annex

UL International Demko A/S certifies as **Notified Body No. 0539** according to the Directive of the Council of the European Community of 26 February 2014 (2014/34/EU) that the manufacturer maintains a quality assurance system for production that complies with **Annex IV** of this Directive.

UKEx Annex



UL International Demko A/S certifies as **Notified Body No. 0843** according to the UK Legislative Decree 2016:1107 of 08 December, 2016, that the manufacturer maintains a production quality system that complies with **Annex IV** of this Legislative Decree.

Norms and directives



Directive	Norms
2014/30/EU / UKSI 2016:1091	EN 61000-6-2:2005 + AC:2005-09 EN 61000-6-3:2007 + A1:2011 <i>Supplementary:</i> EN 61000-6-2:2019
2014/34/EU / UKSI 2016:1107	EN IEC 60079-0:2018 + AC:2020-02 EN 60079-1:2014 + AC:2018-09 EN 60079-11:2012 EN 60079-31:2014
2011/65/EU / UKSI 2012:3032	EN IEC 63000:2018

Marking and certificates

HE100.01 / HE101.01 / HE102.01 / HE103.01

Marking	Certificate
 II 2 G Ex db IIC T4 Gb  II 2 D Ex tb IIIC T120 °C Db	ATEX: PTZ 16 ATEX 0029 X Rev 4 UKEx: UL22UKEX2481X

HE100.02

Marking	Certificate
 II 2 G Ex ib IIC T4 Gb  II 2 D Ex ib IIIC T125 °C Db	ATEX: PTZ 16 ATEX 0029 X Rev 4 UKEx: UL22UKEX2481X

Signature

Nürtingen, 31/05/2024

Place and date



Tobias Bronkal, Managing Owner